

## **WPT Server software**

### **Installation Manual – Upgrade to latest Version**

#### **Purpose**

This document will guide the installer to upgrade the WPT host application

#### **Host Application Installation**

1. Close the USBReader application (if running).
2. Unzip the WPT\_HostApp\_Vxx.xx.xx\_Upgrade
3. Execute WPT\_HostUpgrade.bat
4. Wait for the batch file to complete the execution. ( Some error messages are normal, depending on prior version)
5. This completes the upgrade.
6. The installation log file will be created at C:\WPT\WPT\_Upgradelog.txt
7. Remember to enable and execute Windows Update to get the latest security patches if necessary from \windowsupdate folder.
8. Remember to enable the PGandEListenerService for any Auto-DR customer
9. Remember to enable the BACnetServer for any BACnet-connected customer
10. Reboot the machine for change to take effect.