

# Thermostat Upgrades


Your thermostats have been upgraded as part of a building improvement project. The new thermostats will provide you better comfort control and will help save energy.

Instructions for using the thermostats are below. Please contact your building manager if you have additional questions.



## How the new thermostats work:

The thermostats have an adjustable setpoint. When the room temperature is above or below the setpoint, the thermostat will call for cooling and heating accordingly.

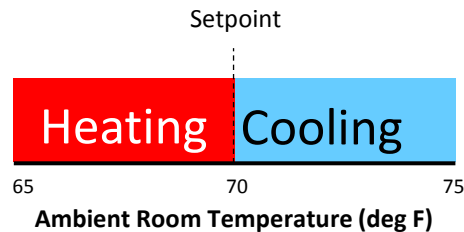

### To operate:

#### Current room temperature:

The number displayed is the actual room temperature.

#### Current setpoint:

Press the up ▲ or down ▼ button once. The flashing is the setpoint for the thermostat.

#### Increase setpoint temperature:

Press the up ▲ button once. Then press up ▲ once for every degree increase desired.

#### Decrease setpoint temperatures:

Press the down ▼ button once. Then press down ▼ once for every degree decrease desired.

#### Afterhours override:

Temperatures can be reset afterhours to occupied setpoints by pressing the 'OVR' center button. Select 1-4 hours using the up ▲ or down ▼ buttons to select the desired time for the override.